

Important Information – Read Before Installing

Like other building products the successful use of vinyl wallcovering requires that it be selected, installed, used and maintained in compliance with all of these instructions. You must read and understand all of these instructions prior to installing vinyl wallcovering. If you have any questions seek advice from an experienced building professional before proceeding. These instructions supercede and replace all prior instructions.

Moisture Elimination, Permeability and Mold. Successful use of vinyl wallcovering requires building walls that are not subject to moisture accumulation. One of the characteristics of vinyl wallcovering is that it has little or no moisture permeability. This characteristic can be an important benefit in terms of durability, cleanliness and wall protection. However, if deficiencies in the design, construction or maintenance of a building, or other circumstances, allow liquid or vapor moisture to accumulate in a wall or wall cavity, vinyl wallcovering can act as a vapor barrier restricting the escape of moisture and increasing the risk of mold growth and other building damage from trapped moisture.

There are many possible building deficiencies that can lead to moisture accumulation in a wall or wall cavity including unsealed building exteriors (roof, walls, windows, etc.); inadequate or unbalanced HVAC systems (including failure to maintain positive pressure in a building); absence, inadequacy or misplacement of an exterior wall cavity vapor barrier; use of wet construction materials; leaking pipes; etc. Depending on the condition of a building, moisture accumulation can be more likely in hot humid climates such as the southern coastal region in the United States.

Good design, construction and maintenance practices can prevent moisture accumulation. In all cases, moisture and sources of moisture accumulation must be eliminated before installing any wall surfacing material. Mold inhibitors contained in the vinyl, adhesives and primers used for wallcovering will not prevent mold growth if moisture is allowed to accumulate in a wall or wall cavity. Prompt corrective action to eliminate moisture accumulation is always required.

Increased Permeability. Conventional vinyl wallcovering which is given high quality perforation and properly installed and maintained on a permeable wall surface in compliance with these instructions will have greater permeability than conventional vinyl wallcovering which has not been perforated.

The level of wallcovering permeability achieved will vary greatly depending on the quality of perforation, number of holes, size of holes, consistency of perforation and the potential for hole closure or obstruction. In addition, the permeability of an interior wall can be affected by many factors, including wall construction, wall materials, wall conditions (including the type, thickness and number of layers of paint or primer) and wall surface preparation. If a wall already has low or no permeability, then installing perforated wallcovering will not provide any permeability benefit to the wall system. Walls should be tested for permeability prior to installation of perforated wallcovering.

Neither perforated nor any other type of wallcovering is a solution for and should not be used in buildings which have or may have wall or wall cavity moisture accumulation or other moisture problems. Neither perforated nor any other type of wallcovering will prevent mold growth or other moisture related damage if moisture accumulation is permitted to occur in a wall or wall cavity. Prompt corrective action to eliminate moisture accumulation is always required.

Note: Perforated wallcovering will not be as cleanable, durable or protective as conventional unperforated wallcovering and, due to its higher permeability, it will not prevent building interior liquid or vapor moisture from going through the wallcovering into the wall and wall cavity. Protecting walls from interior liquid or vapor moisture intrusion can be an important requirement in many applications.

Wallcovering Selection and Installation. It is important to keep in mind that wall surfacing materials are only one component of a wall system (which includes exterior wall surface, sheathing, exterior wall cavity vapor barriers, insulation, framing, HVAC and among other materials). Prior to using any

wall surfacing materials (including conventional or perforated vinyl wallcoverings) an experienced building professional (who is familiar with the design and condition of the specific building, local conditions and the characteristics of vinyl wallcovering) must be consulted to determine which wall surfacing materials are appropriate for that building.

All wallcoverings must be installed by an experienced commercial wallcovering installation professional who understands wallcovering use and installation requirements, including the requirement to test for and eliminate sources of moisture accumulation prior to the installation of wallcovering.

Building maintenance must include actions necessary to prevent the development of moisture accumulation sources as well as routine inspections for and prompt corrective action if moisture accumulation is found in a wall or wall cavity.

Prior to installation check the OMNOVA website for additional and updated information on wallcovering permeability, moisture and mold and on wallcovering selection, installation, use and maintenance: www.omnova.com.

Double Hanging. Wallcovering must not be hung over other wallcovering. If a fire were to occur, wallcovering hung over other wallcovering will result in increased smoke generation, flammability, and toxicity. Any such hanging is in violation of OMNOVA's wallcovering use instructions.

Installation Checklist. Read and follow all of these instructions:

- Check to ensure you received the correct pattern, color and amount of wallcovering
- Determine whether the building (including building walls) and wallcovering materials are in suitable condition for installation to proceed
- Determine whether the wallcovering should be installed as reversed or non-reversed and/or random, straight across, or drop match.
- Prepare wall surface and install as directed below.
- **Note:** If at any time during the installation a discrepancy is discovered, STOP installation and contact your distributor or dealer to resolve before proceeding.

Building and Material Conditions. The building must be weather-tight with HVAC settings (including pressure, temperature and relative humidity) the same as those of an occupied building for three days prior to, and throughout installation and for three days after installation. The walls must be structurally sound including elimination of sources of moisture accumulation into the wall or wall cavity. The wallcovering must be in a clean and dry condition and must be stored at normal occupied building temperature and humidity for at least three (3) days prior to installation. All materials used in connection with installation, including all adhesives and primers must be new good quality commercial grade materials which have not been contaminated. A test installation of at least three strips applied three days in advance of the main installation is recommended.

Surface Preparation. Proper surface preparation is essential for a quality wallcovering installation. Follow these instructions for hanging wallcovering on gypsum board. Hanging on any other surface will require different instructions.


1. The walls must be smooth, clean, dry, and free of mold, mildew, grease, or other stains. If you are installing over existing paint or primer, make sure that it has good adhesion to the wall. Any mold or mildew on a wall may be an indication of a moisture problem. The mold itself must be removed from the wall and any moisture accumulation sources must be corrected before proceeding with installation. Significant mold growth should be remedied by an experienced mold remediation professional under EPA guidelines for mold remediation. Any wall irregularities should be corrected with either spackling or drywall compound. Wall stains and marks such as ballpoint ink, grease, lipstick, crayon, marking pens, or inks must be removed from the wall. If stains and marks are not removed from a wall they may bleed through the wallcovering.
2. Remove old wallcovering completely including both top and bottom layers. After wallcovering is removed, remove remaining adhesive with adhesive remover. Then rinse the wall and allow to dry.
3. Apply wallcovering primer containing a mold inhibitor.

- Note: Hanging wallcovering on a non-permeable wall may result in extended adhesive drying times and a higher risk of mold growth.**
- Note: If installing perforated wallcovering the wall itself as well as wall primer must be permeable to achieve any wall system permeability benefit.**


Installation.

- Use heavy-duty clay based adhesive for 20 oz. or higher weight wallcovering. Wallcovering that is 19 oz. or less can use a heavy duty clear adhesive. All adhesives must contain a mold inhibitor. **Note: Perforated wallcovering requires a permeable adhesive. Note: Wallcovering with PreFixx® coating requires an undiluted heavy-duty clay based adhesive.**
- Before cutting, examine wallcovering to make certain pattern, color and quantity is satisfactory and as ordered. Claims will not be accepted for cut yardage.
- Determine whether the wallcovering should be installed as reverse or on non-reverse and/or random, straight across, or drop match.

Reverse Hanging

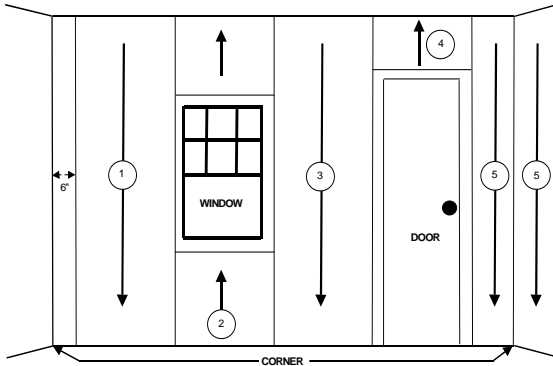

Non-Reverse Hanging

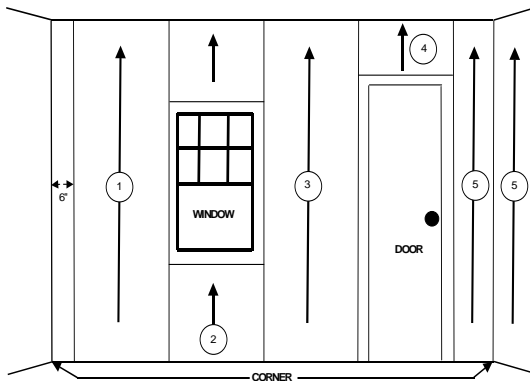

The wallcovering tip card or your distributor can provide this information. Generally, textured and non-matched patterns are reverse hung. Occasionally, textured wallcovering "panels" when it is reversed. If paneling occurs install three test strips as a non-reversed pattern and evaluate appearance. Check all roll tickets to determine if more than one run or lot of the same pattern is to be installed. If feasible use different lots in different rooms and if not feasible use inside corner to change lots.

- Cut panels and install headers in roll number sequence. **COMMERCIAL WALLCOVERING MUST BE INSTALLED IN REVERSE ROLL NUMBER SEQUENCE.**
- INSTALL ALL WALLCOVERING UNDER ADEQUATE LIGHTING. EVALUATE FOR COLOR UNIFORMITY UNDER PERMANENT LIGHTING CONDITIONS. WHEN THIS IS NOT POSSIBLE, DUPLICATE THE FINAL LIGHTING CONDITIONS AS NEARLY AS POSSIBLE. AFTER THREE STRIPS ARE INSTALLED, INSPECT THE WALLCOVERING. IF THE PATTERN EFFECT IS NOT ACCEPTABLE, OR IF THERE IS VARIATION IN COLOR, DISCONTINUE HANGING AND CONTACT THE DISTRIBUTOR IMMEDIATELY. OMNOVA will not be liable for materials or labor charges over three strips.**

- Measure the wall height, allowing for pattern match, add 4 inches, and then cut the wallcovering. It will overlap onto the ceiling and the baseboard approximately 2 inches.
- Apply adhesive to the back using either a pasting machine or a paint roller. Work the adhesive in to cover the back completely, especially near the edges. Fold each end toward the middle, pasted sides together, aligning the edges carefully so they do not dry out. Caution: Do not create the wallcovering. Allow to "relax" or book for 10 minutes. This will allow the adhesive to penetrate the wallcovering fabric which is important for a successful installation. **Note: Perforated wallcovering must be dry hung.**
- Many geometric and matched patterns may require table trimming with a straight edge to ensure pattern uniformity across seams. Other patterns should be overlapped and double cut on the wall. Care should be exercised so that the wallboard underneath is not scored. A double cutting tool or seam pad is recommended to prevent scoring the wall. The selvage (excess trimmed edge) should be removed from the wall and the seam closed within 10 minutes.
- Hang the first strip to a plumb line and allow it to overlap onto the ceiling and baseboard. Use a smoothing brush, broad knife, or plastic smoother to remove any air bubbles and to make sure all of the wallcovering has made good contact to the wall. Trim with scissors or razor knife at the ceiling and baseboard, around windows, etc.
- Use a seam roller to flatten the edges at the seams, ceiling, and baseboard. Use light pressure. Do not press hard enough to remove the adhesive from underneath the wallcovering.
- Place the second strip to the edge of the first strip (or overlap and double cut) and smooth out firmly. Repeat step #8. Sponge each strip with clean water to remove any excess adhesive. Use a soft bristle brush to clean if necessary. Change this wash water frequently. Blot these surfaces dry with a clean towel. Be certain to wash the ceiling and the baseboard to remove any paste residue. Do not leave any overlap at the seams since vinyl will not adhere to itself. Seams should be vertical, have a tight fit, and be free from air and paste bubbles. Seams should not be located closer than 6" to corners.
- After three panels are smoothed to the wall surface and excess paste is removed, examine the installed panels for color uniformity. Panels on non-matching patterns normally have a width on the wall of 51-53 inches. Geometric and other matching patterns vary in "on the wall" width. It may be necessary to trim one or both selvages further to obtain uniform color match across seams. Proceed in the same manner around the room. Any objectionable variations in color and/or pattern match must be immediately communicated to the dealer for inspection before proceeding further with the installation.

Maintenance and Cleaning of Wallcovering. Stains should be removed as soon as possible to limit possible reaction between the staining agent and the wallcovering. Time is especially important for removing materials containing colors or solvents, such as ballpoint ink, lipstick, oil, shampoo tints, and some foodstuffs. If soil remains on the wallcovering too long, permanent discoloration may develop. Wallcovering should not be sprayed with wax or other protective coating. Such applications can discolor the material and will reduce or eliminate the permeability of perforated wallcovering. Ordinary dirt and smudges can be removed with a mild soap, warm water, and if necessary, a bristle brush to remove dirt from the crevices of deeply textured patterns. Clean from the bottom of the wall upward to protect the baseboard and to prevent streaking. Rinse thoroughly with clean water from the top down using a sponge. Deeply embossed wallcoverings need extra attention in case suds or loosened dirt lodges in depressed surfaces. Blot wallcovering dry with a soft, lint-free towel. For more difficult stains that are only surface deep, the use of a stronger detergent is recommended. Try an inconspicuous spot first before attempting the entire wall. Always rinse the wall well after applying a detergent. Not recommended for cleaning are steel wool or powdered abrasive cleaners because they mar the surface leaving an unsightly appearance. Do not use active solvent-type cleaning preparations, such as nail polish remover, tar and bug removers, etc., because they will remove print and/or finish from the wallcovering and will reduce or eliminate permeability of perforated wallcovering.

Limited Warranty. Subject to the certain conditions and limitations, OMNOVA provides a limited warranty for its wallcovering products. A copy of the limited warranty can be found at www.omnova.com. All OMNOVA products and services are offered and sold subject to the OMNOVA Solutions Standard Terms and Conditions of Sale Agreement, set forth at www.omnova.com.